

CM5006-REAR





Video instructions are available at
<https://www.fhgroupauto.com/product/jeep-wrangler-jl/>


PACKAGE INCLUDES

Warning


- Machine wash cold, delicate cycle. Air dry only.
- Avoid sharp objects to protect covers from being scratched/damaged.
- We suggest wearing protective eyewear and gloves during installation.

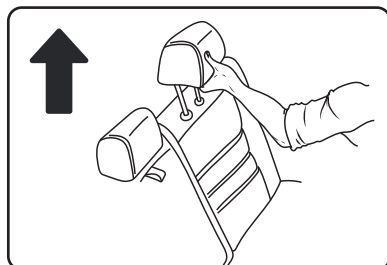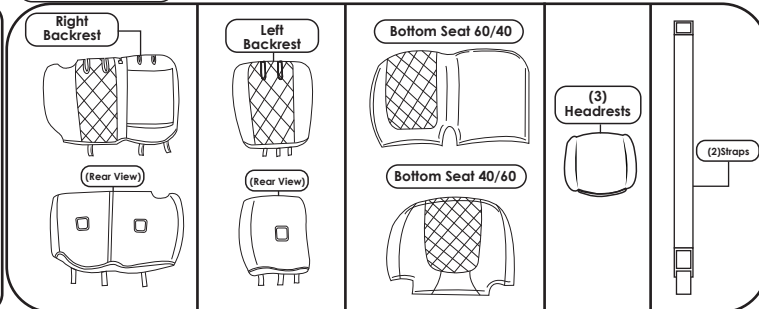


- To start, remove the headrest by pushing the release button at the base of the headrest.

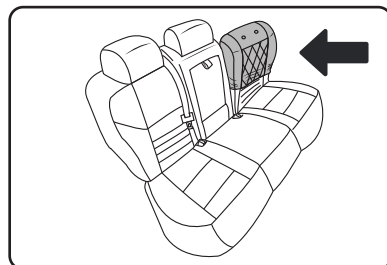


- Pull the left split bench seat forward and slide the left backrest cover down.

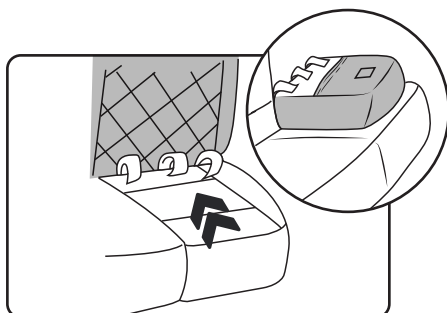


- Push the hook-and-loop straps located on the bottom of the left backrest cover through the seat crevice. Attach the rear hook-and-loop straps directly to the upholstery on the back of the seats.

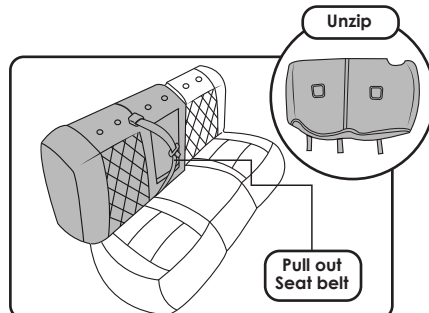


- Unzip your right backrest cover. Pull the right bench backrest forward and slide the cover down. Make sure you pull out your vehicle's seat belt before you zip up the backrest cover.

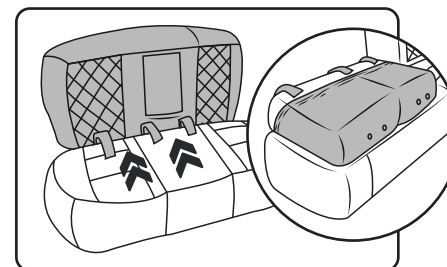


- Push the hook-and-loop straps located at the bottom of the right backrest cover through the seat crevice. Attach the rear hook-and-loop straps directly to the upholstery of the back seats.

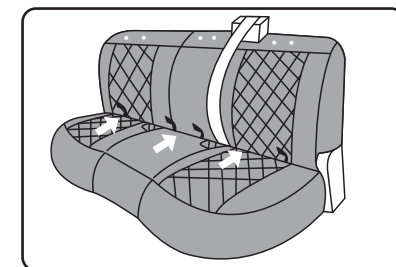


- Place the bottom seat cover on the bench seat cushion and push the buckle straps through the center crevice of your car seat.

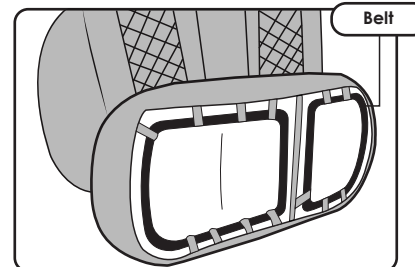


- Place the bottom seat cover on the bench seat cushion. Attach the belt through the loop straps for the 40/60 and 60/40 split as shown in the image above. Pull the adjustable straps to your desired tension for a snug fit.

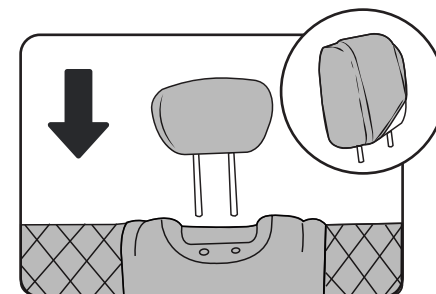

- Slip on the headrest cover and reattach the headrests. TIP: Starting from either side of the headrest and sliding the cover sideways will help you achieve a secure fit.

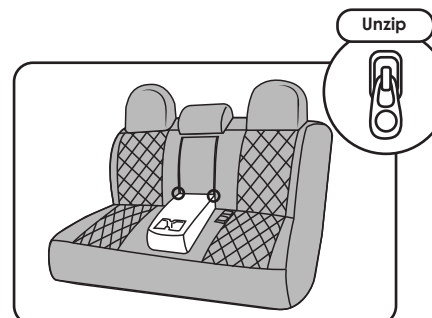

- To gain access to the rear center console, please unzip the zipper provided.

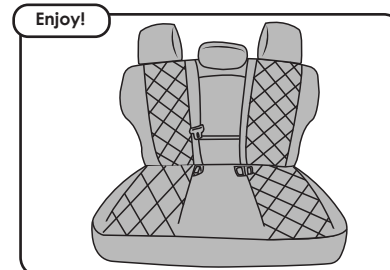

- Adjust accordingly, smooth out your custom fit seat covers and enjoy!