



CM5013-FRONT




Video instructions are available at <https://www.fhgroupauto.com/product/ford-f150-xtl-lariat-raptor/>

Warning


- Machine wash cold, delicate cycle. Air dry only.
- Avoid sharp objects to protect covers from being scratched/damaged.
- We suggest wearing protective eyewear and gloves during installation.

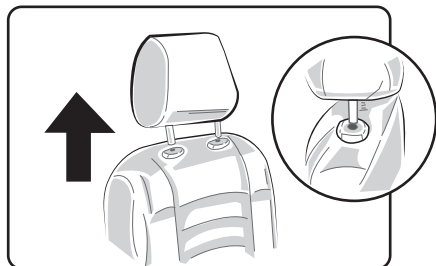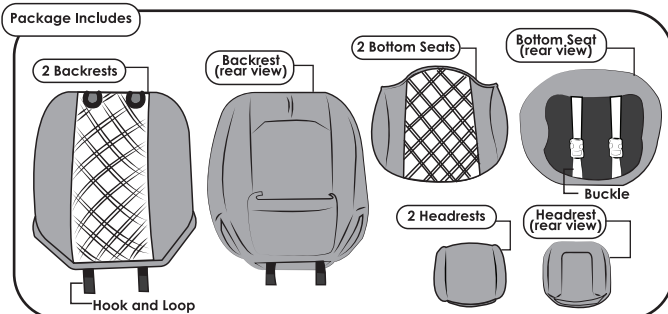


- Detach the headrest by pressing the button located at the base of the headrest. Then simply lift the headrest to separate it from the backrest.

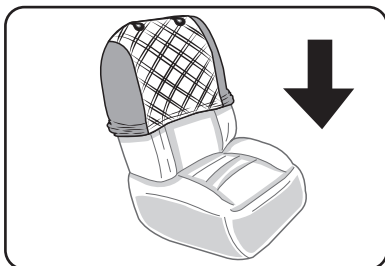


- Place the backrest cover over the seat, making sure to align the holes for the headrests accordingly.

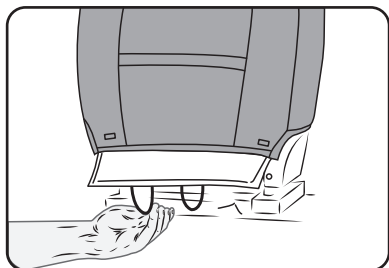


- On the lower part of the back of the seat, detach the seat's flap by removing the clips underneath the seat. That way, you will expose the underside of your seat.

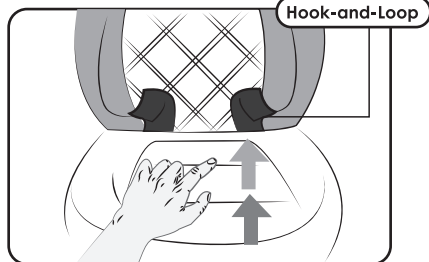


- Push the straps through the seat crevice, and position the straps to the back of the seat.

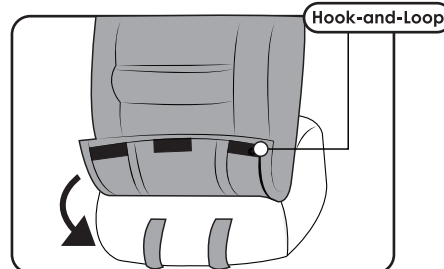


- Locate the hook-and-loop straps at the back of the backrest cover and attach them directly to the car seat's upholstery.

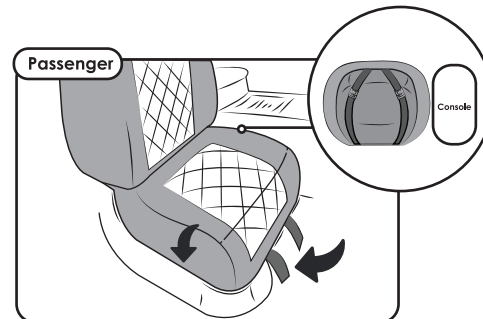


- Place the bottom seat cover on the passenger seat. Tuck the sides of the seat cover into the car seat and tape the hook-and-loop near the center console to your car seat. Finally place your hook-and-loop-straps underneath your car seat.

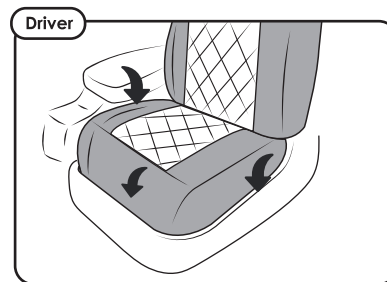


- Place the bottom seat cover on the driver seat. Tuck the sides of the seat cover into the crevices of the car seat.

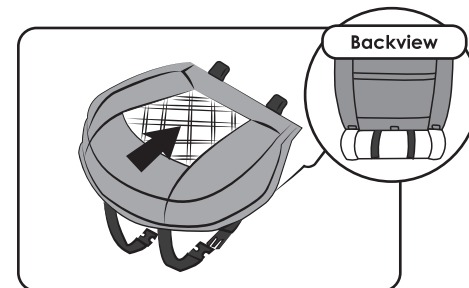

- For the bottom seat cover (of both driver and passenger sides) push the hook-and-loop straps through the crevice, then connect the female and male end of the straps onto the backside of your bottom seats. See image above.

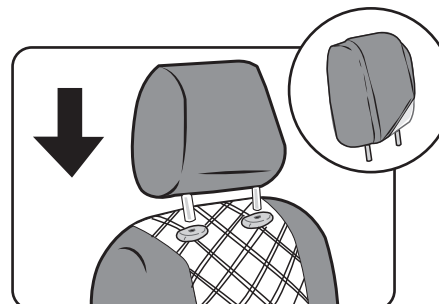

- Slip on the headrest cover. TIP: Starting from either side of the headrest and sliding the cover sideways will help you achieve a secure fit. Finally reattach the headrest to the top of the car seat.

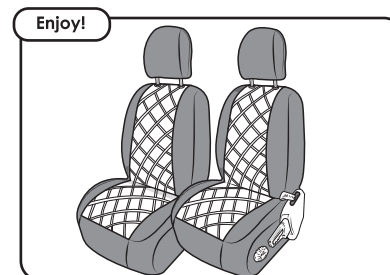

- Adjust accordingly, smooth out your custom-fit seat covers and enjoy!