
INSTALLATION IS THE KEY

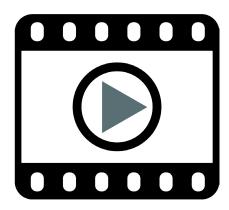

watch installation videos at https://www.fhgroupauto.com/installation/

For more info, call 1-800-928-5518 or email us at info@fhgroupauto.com



NEED HELP?

Have Questions About Your Order?

FH Group® representatives are ready to help!

Watch Our Installation Videos

Watching our instructional videos FIRST will save time and answer most of your questions. With some patience and proper installation, you can enjoy beautifully fitted covers before you know it (turn over to learn where you can watch our videos).

Toll Free

1-800-928-5518


info@fhgroupauto.com

INSTALLATION MANUAL


FB088-013



Locate the backrest cover. Lift the center seat belt to lay the cover across the seat back

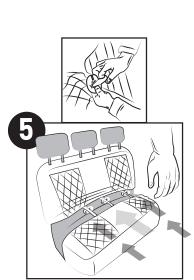

Locate the bottom seat cover and lay it onto the seat. Be sure to lay the cover with the discs facing the seat crevice. Loop each of the backrest cover's bottom straps through one of the corresponding butterfly discs attached to the bottom seat cover. The two covers should now be connected. Push the butterfly discs through the center crevice to the other side of the seat.

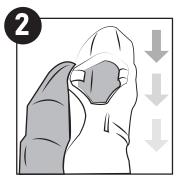

Open the three hook and loop seals at the top of the backrest cover and slide them over the headrests. The openings should be able to fit over the headrests. If you like, you may remove your headrests before installation.




Take one of the metal hooks in your package and attach it to one of the bottom cover's front straps (you may have to pull open the hook). Then, latch the hook to the cover's side strap. The two straps should be connected and resemble the image above. Then, pull the straps over the corner of your seat to secure the cover in place. Repeat on the other side and adjust the cover as necessary. Alternatively, you may also attach a hook to each of the straps and latch the straps under the seat.







Fasten the hook and loop seals around the headrests.

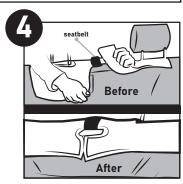

You'll notice two designated openings at the top of the cover that your seat belt can go through. Fit the seat belt through the closest opening. Once in place, fasten the hook and loop seals located at the back of the cover around the seatbelt.



If you removed your headrests, reinstall them and ensure they're firmly in place. Locate the headrest covers and slide one over each of the headrests. You'll notice one of the covers is slightly smaller than the other two. This cover is for the middle headrest.



Once the entire cover is on, it should resemble the illustration above. Adjust the cover as necessary.