 




INSTALLATION IS THE KEY

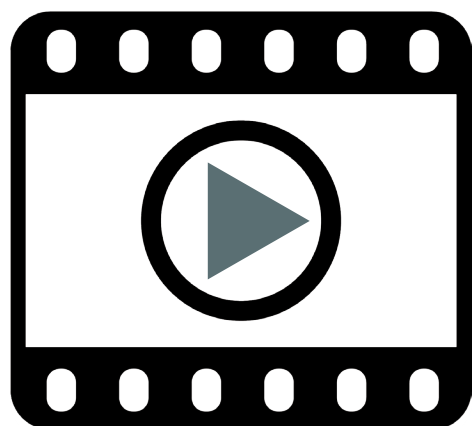

watch installation videos at
<https://www.fhgroupauto.com/installation/>

For more info, call 1-800-928-5518
or email us at info@fhgroupauto.com



NEED HELP?

Have Questions About Your Order?
FH Group® representatives are ready to help!

Watch Our Installation Videos
Watching our instructional videos FIRST will save time and answer most of your questions. With some patience and proper installation, you can enjoy beautifully fitted covers before you know it (turn over to learn where you can watch our videos).

Toll Free
1-800-928-5518
info@fhgroupauto.com

Installation Manual

Video instructions are available at <https://www.fhgroupauto.com/installation>


ATTENTION: DO NOT cut anything before you are completely sure the seat cover is aligned and fitted to your satisfaction.

Front Seat Cover:


1. Place the bucket cover over the seat and slide it down gently, ensuring the cover is lined up correctly. You may need to remove the armrest (instructions for removal are included at the end). To reinsert the armrest, you'll need to cut a small hole along the side of the seat cover where the armrest is located (the material will not tear).

2. Once the cover's backrest portion has been fitted, locate the straps in the cover's center and push them through the seat crevice. Tighten the straps at the bottom of the seat.

Optional: If your front seat's center crevice is blocked by a flap, pull up the flap by locating the strap on the bottom rear of the seat.

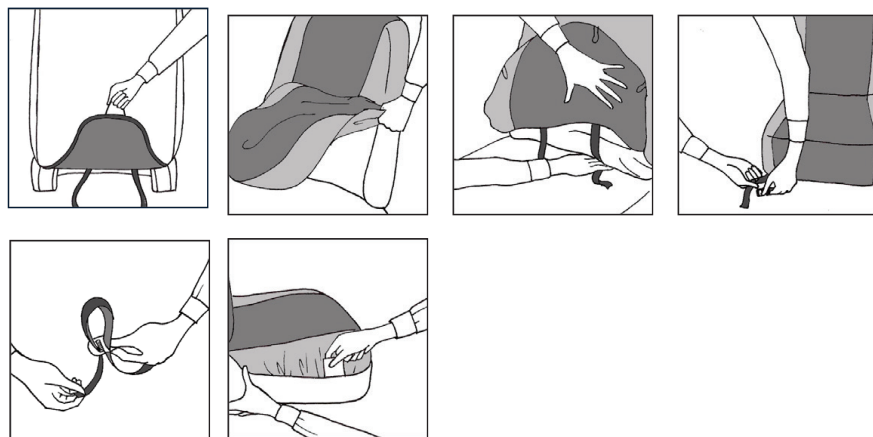

3. Fit the cover's base over the seat. Secure it by connecting the elastic loops under the seat using the supplied snaps or by tucking the mesh cloth underneath the seat.

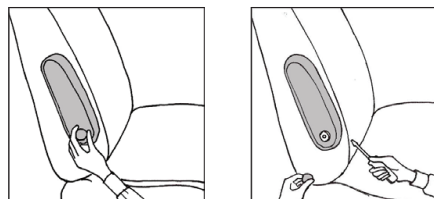

Bucket Seat Armrest:

To remove: locate the round cap at the end of the armrest. Remove the cap and undo the screw inside to take out the armrest. After you have installed the seat covers, reinsert the armrest and tighten the screw.

For installation videos go to
www.fhgroupauto.com/installation