 




# INSTALLATION IS THE KEY

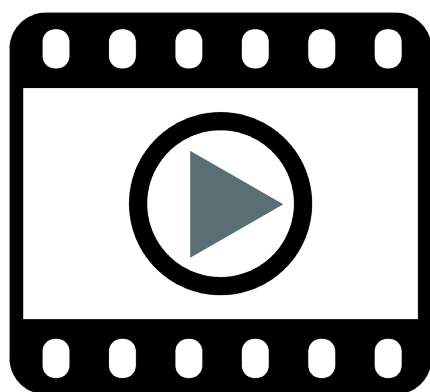

watch installation videos at  
<https://www.fhgroupauto.com/installation/>

For more info, call 1-800-928-5518  
or email us at [info@fhgroupauto.com](mailto:info@fhgroupauto.com)



# NEED HELP?

**Have Questions About Your Order?**  
FH Group® representatives are ready to help!

**Watch Our Installation Videos**  
Watching our instructional videos FIRST will save time and answer most of your questions. With some patience and proper installation, you can enjoy beautifully fitted covers before you know it (turn over to learn where you can watch our videos).

**Toll Free**

**1-800-928-5518**

**[info@fhgroupauto.com](mailto:info@fhgroupauto.com)**

# Installation Manual

Video instructions are available at <https://www.fhgroupauto.com/installation>

**ATTENTION: DO NOT cut anything before you are completely sure the seat cover is aligned and fitted to your satisfaction.**

NOTE: All airbag-compatible covers feature specially engineered stitching along the side seam. This unique detail allows your airbag to deploy without any resistance and assures the car's safety features function as designed in case of an accident.

 
 
## Front Seat Cover:

1. Fit the bucket cover over the seat and slide it down gently: pulling or tugging too hard on the cover may cause the airbag-compatible seam to rip. To ensure the cover is properly aligned, double-check that the cover's airbag tag is on the same side of the seat as the airbag (in most cars, the airbag faces the car door).

If you're unable to slide the cover on, remove the headrest first by pushing its release button. You may also need to remove the armrest (instructions for removal are included at the end). To reinsert the armrest, you'll need to cut a small hole along the side of the cover where the armrest is located (the material will not tear).

2. Once the cover's backrest portion has been fitted, locate the straps in the cover's center and push them through the seat crevice. Tighten the straps at the bottom of the seat.



Optional: If your front seat's center crevice is blocked by a flap, pull up the flap by locating the strap on the bottom rear of the seat.

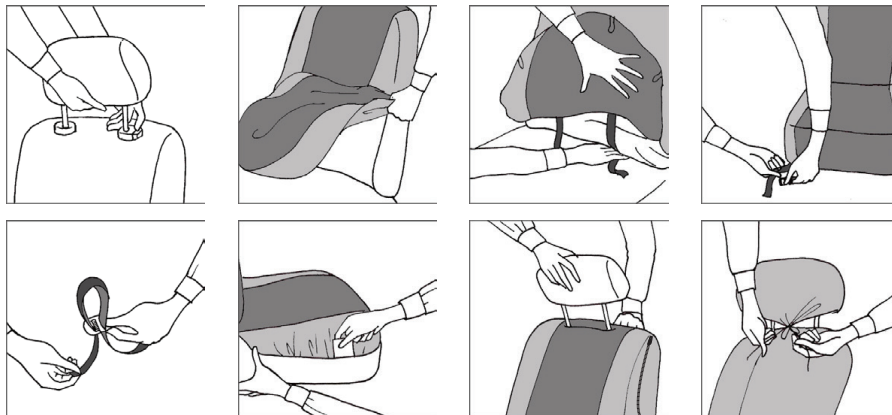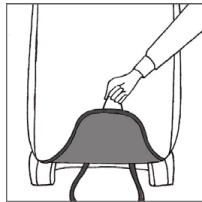


3. Fit the cover's base over the seat. Secure it by connecting the elastic loops under the seat using the supplied snaps or by tucking the mesh cloth into the seat edges.

4. Ensure the cover is fitted to your satisfaction. Then use scissors to make two small slits on top of the seat cover where the headrest posts will be positioned (be sure to cut through to the back underlining). Reinsert the headrest and cover it with the headrest cover. Secure the cover by fastening the elastic straps inside.

  5. Carefully unzip the cover's side zipper to let the seatbelt out. Then rezip it to a position that best fits your built-in seat belt feeder.

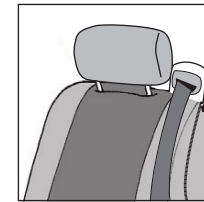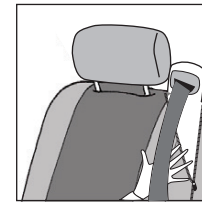

## Bucket Seat Armrest:

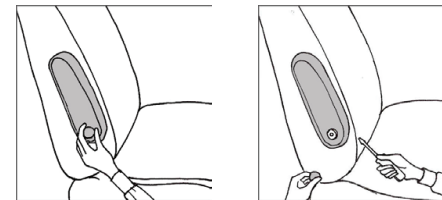 

To remove: locate the round cap at the end of the armrest. Remove the cap and undo the screw inside to take out the armrest. After you have installed the seat covers, reinsert the armrest and tighten the screw.

For installation videos go to

[www.fhgroupauto.com/installation](https://www.fhgroupauto.com/installation)