


Installation Manual

ATTENTION: DO NOT cut anything before you are completely sure the seat cover is aligned and fitted to your satisfaction.

Front seat cover:

1. Align the bucket cover over the seat and slide it down gently, ensure that the designs are lined up correctly. If you are not able to slide the cover on, remove headrest first (push release button).
2. Once the backrest part has been fitted, locate the straps in the center of the cover and push it through the back seat crevice and tighten the straps on the bottom of the seat.

Optional: If your front seat center crevice is blocked by a flap, you can pull up the flap by locating the strap on the bottom rear of the seat.

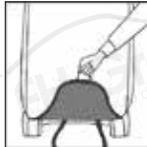

3. Fit the base part of the cover over seat and secure it by connecting the elastic loops underneath the seat with supplied Snaps OR you can just tuck the mesh cloth underneath the seat.
4. Reinsert headrest and cover it with headrest cover, secure headrest cover by fastening the elastic straps inside the headrest cover and before closing the top, **make sure you peel off the cloth attached to the velcro.**



Rear bench cover/Seat (bottom) cover:

1. Find the rear seat cover from the package, **it is the one with the tag labeled *Bench Bottom* located on the border inside of the cover.** (It looks very similar to the backrest cover except it's smaller in size and has 3 pieces of mesh cloth attached to it.) To lift up your bench seat, locate the control on the bench and push to yank it up.

2. Fit the cover over seat and secure it by fastening the straps on the bottom of the seats. Also fasten the elastic loops together tightly for a snug fit using the supplied snaps (this step is optional). These snaps and straps will be hidden underneath the seat. Or you can just tuck in the mesh cloth underneath the seat. The installation will be easier if you are able to lift up the seat.




Rear bench cover/backrest cover:

1. Remove headrests first. If your rear headrests are not removable, then you can cut a line from the edge of the backrest cover to install the backrest cover. The material will not rip.


The backrest cover is the one labeled *Bench Backrest* located on the border inside the cover.

2. Fit the cover on the backrest. Push the bottom straps through seat crevice to the back and fasten the straps from the back side of the bench for a snug fit. Removing the seat or lifting it up will make it much easier to install the backrest cover. You can also connect the loops with supplied snaps (this step is optional). Or you can just tuck in the mesh cloth on the side of the seat.

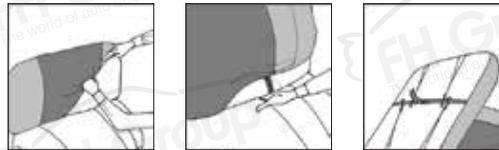

Rear headrest cover:


Fit the headrest cover over rear bench headrest. Cut two tiny holes on top of the backrest cover where the headrest needs to be inserted back. **DO NOT cut anything before you are completely sure the backrest cover is aligned and fitted to your satisfaction.** Stuff the material underneath the rim for a smoother look (this step is optional), then put the headrests back. Fasten the straps to secure headrest covers.

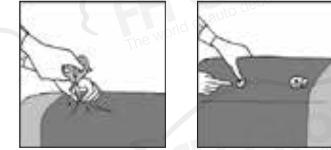

Note – Rear seat belt adjustment

Backrest: Make sure you pull out the seatbelt first. Fit the seat cover on the backrest, make sure seatbelt is on top of the cover, not beneath the cover. Then cut a slit from the edge of the cover where the seatbelt comes out.

Seat: Ensure the rear seat covers are fitted to your satisfaction; then cut two small holes at where the belt buckles are in order to pull the belt buckles out. The material will not tear up.

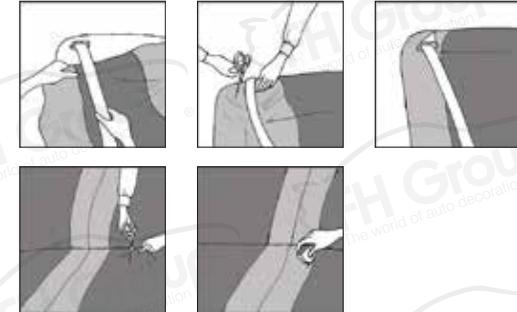

Bucket Seat Armrest:

To remove armrest: the screw is located at the end of the armrest. Remove the round cap and undo the screw inside to take out the armrest. After you have installed the seat covers, redo the screw and put back the armrest.

