

Installation Manual

ATTENTION: DO NOT cut anything before you are completely sure the seat cover is aligned and fitted to your satisfaction.

Rear bench cover/Seat (bottom) cover:

1. Find the rear seat cover from the package, it is the one with the tag labeled **BOTTOM** located on the border inside of the cover. (It looks very similar to the backrest cover except it's smaller in size and has 3 pieces of mesh cloth attached to it.)

To lift up your bench seat, locate the control on the bench and push to yank it up.

2. Fit the cover over seat and secure it by fastening the straps on the bottom of the seats. Also fasten the elastic loops together tightly for a snug fit using the supplied snaps (this step is optional). These snaps and straps will be hidden underneath the seat. Or you can just tuck in the mesh cloth underneath the seat. The installation will be easier if you are able to lift up the seat.




Rear bench cover/backrest cover:

1. Remove headrests first. If your rear headrests are not removable, then you can cut a line from the edge of the backrest cover to install the backrest cover. The material will not rip.

The backrest cover is the one labeled 'BACKREST' tag on the border inside the cover.


2. Fit the cover on the backrest. Push the bottom straps through seat crevice to the back and fasten the straps from the back side of the bench for a snug fit. Removing the seat or lifting it up will make it much easier to install the backrest cover. You can also connect the loops with supplied snaps (this step is optional). Or you can just tuck in the mesh cloth on the side of the seat.

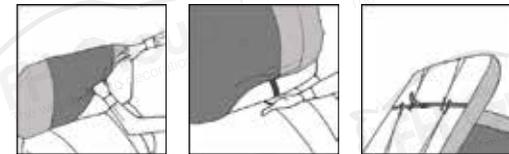

To split or fold the rear bench:

Based on the position of the bench split, unzip the corresponding zipper on the backrest or bottom seat cover, this will allow you to fold the bench up and down. Unzip one zipper from the bottom. We also include a set of mesh cloth with zippers to cover the exposed part.

You can unzip the zipper in the middle to allow armrest/cup holder down. Make sure to unzip from the bottom not the top of the cover.

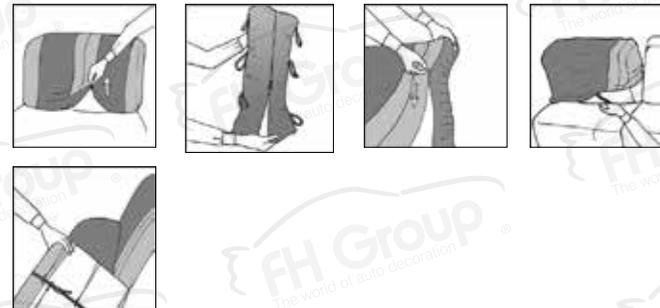

Rear headrest cover:

Fit the headrest cover over rear bench headrest. Cut two tiny holes on top of the backrest cover where the headrest needs to be inserted back. **DO NOT cut anything before you are completely sure the backrest cover is aligned and fitted to your satisfaction.** Stuff the material underneath the rim for a smoother look (this step is optional), then put the headrests back. Fasten the straps to secure headrest covers.



Note – Rear seat belt adjustment

Backrest: Make sure you pull out the seatbelt out first. Fit the seat cover on the backrest, make sure seatbelt is on top of the cover, not beneath the cover. Then cut a slit from the edge of the cover where the seatbelt comes out.

Seat: Ensure the rear seat covers are fitted to your satisfaction; then cut two small holes at where the belt buckles are in order to pull the belt buckles out. The material will not tear up.

