

# Installation Manual

Video instructions are available at <https://www.fhgroupauto.com/installation>

**ATTENTION: DO NOT cut anything before you are completely sure the seat cover is aligned and fitted to your satisfaction.**


**NOTE:** All airbag-compatible covers feature specially engineered stitching along the side seam. This unique detail allows your airbag to deploy without any resistance and assures the car's safety features function as designed in case of an accident.

## Front Seat Cover:

1. Fit the bucket cover over the seat and slide it down gently: pulling or tugging too hard on the cover may cause the airbag-compatible seam to rip. To ensure the cover is properly aligned, double-check that the cover's airbag tag is on the same side of the seat as the airbag (in most cars, the airbag faces the car door).

If you're unable to slide the cover on, you may need to remove the armrest (instructions for removal are included at the end). To reinsert the armrest, you'll need to cut a small hole along the side of the cover where the armrest is located (the material will not tear).

2. Once the cover's backrest portion has been fitted, locate the straps in the cover's center and push them through the seat crevice. Tighten the straps at the bottom of the seat.

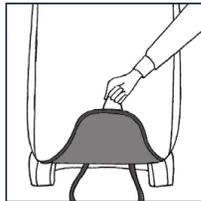


Optional: If your front seat's center crevice is blocked by a flap, pull up the flap by locating the strap on the bottom rear of the seat.

3. Fit the cover's base over the seat. Secure it by connecting the elastic loops under the seat using the supplied snaps or by tucking the mesh cloth underneath the seat.



## Bucket Seat Armrest:

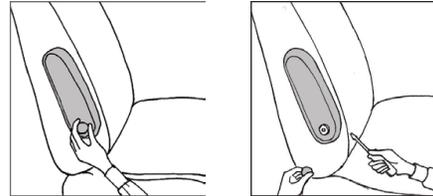

To remove: locate the round cap at the end of the armrest. Remove the cap and undo the screw inside to take out the armrest. After you have installed the seat covers, reinsert the armrest and tighten the screw.

For installation videos go to  
[www.fhgroupauto.com/installation](https://www.fhgroupauto.com/installation)