
CM5026 2ND & 3RD ROWS


Video instructions are available at https://www.fhgroupauto.com/product/custom-fit-seat-covers-for-2018-2023-honda-odssey-full-set/



REMOVE ALL THE HEADRESTS OF THE 3-ROW SEATS

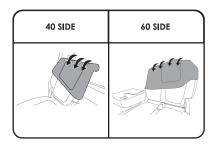

(5) Slide the 3-Row backrests covers over each backrest.

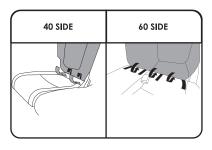



6 Push the straps through the seat crevice, and position the straps to the back of the seat.




- Machine wash cold,

 delicate cycle. Air dry
 only.
- Avoid sharp objects to protect covers from being scratched/damaged.
- We suggest wearing
 protective eyewear and
 gloves during installation.

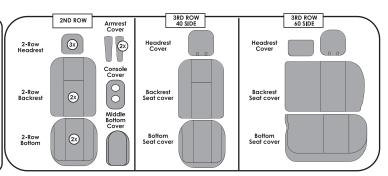


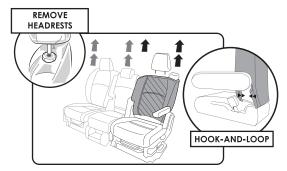


To start, remove the headrests by pushing the release button at the base of the headrests. Then, slide the backrest cover onto seat and zip the cover together. Once it's on, attach the hook-and-loop attachments located under the armrests.

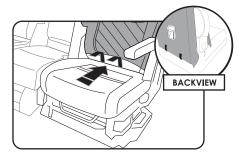


2 Push the straps through the seat crevice, and position the straps to the back of the seat.

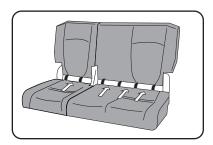


7) Place the bottom seat covers (40 and 60 sides) on the seats respectively. Then, push the hook-and-loop straps through the crevice.

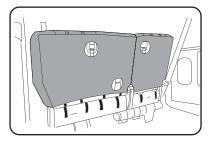


(8) From the back of the 3-row bench, attach to the seat's upholstery all the hook-and-loop straps of the bottom cover and the hook-and-loop attachments on the back side of the cover.

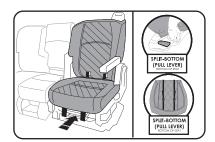


3 Place the bottom seat covers on your car seat and push the buckle straps through the seat crevice. Then, connect the front and rear buckle straps underneath your seat. Please repeat the same process to install the other 2-Row seat.

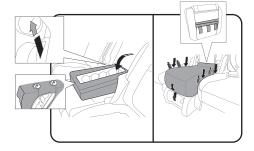

(4) Slide the center console cover over the console following its contour and close the cover together using the hook-and-loop attachments. To install the seat bottom cover, place it over the seat, insert the 3 hook-and-loop straps through the seat crevice, and attach them to the seat's upholstery. Finally, insert into the seat the 5 plastic push clips located on the sides and front of the cover.

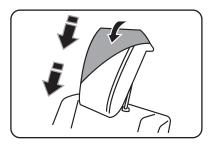

• Reattach all the headrests and slide over the headrest covers.

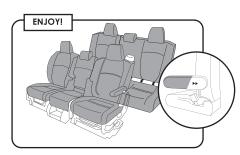

(10) Finally, slide every armrest cover over each armrest, and enjoy your new custom-fit seat covers!