


# CM5004-FRONT INSTALLATION MANUAL

Product details are available at <https://www.fhgroupauto.com/product/chevy-equinox>

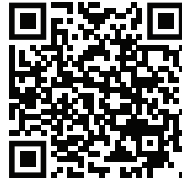


## Warning

- Machine wash cold, delicate cycle. Air dry only.
- Avoid sharp objects to protect covers from being scratched/damaged.
- We suggest wearing protective eyewear and gloves during installation.

## Included Hardware

- 4 Butterfly Discs
- 4 Hooks



## Package Includes

2 Backrests

Backrest (rear view)


2 Bottom Seats

Bottom Seat (rear view)


2 Headrests

Headrest (rear view)


Straps

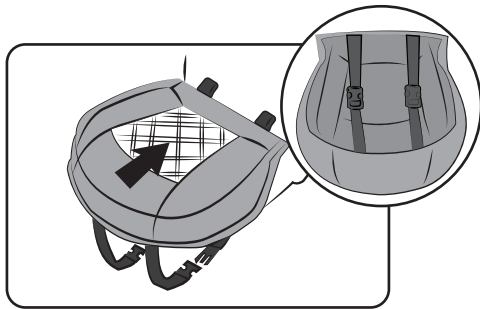


- 1 Slide the bottom seat covers onto the seat. Push the rear straps through the seat crevice. Attach the rear and front straps underneath the seat using the buckles.

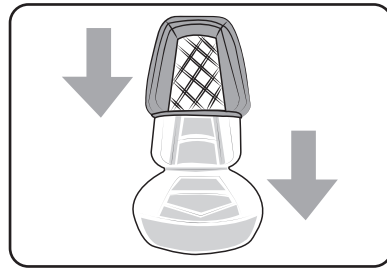


- 2 Open the hook-and-loop closures at the top of the backrest. Slide the backrest cover down over the headrest.

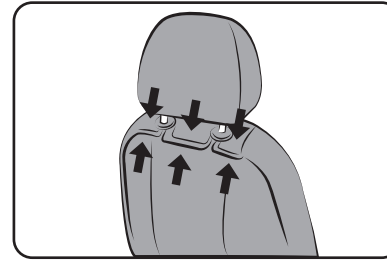


- 3 After the backrest is pulled down, close the top by securing the hook-and-loop pieces together around the base of the headrest.

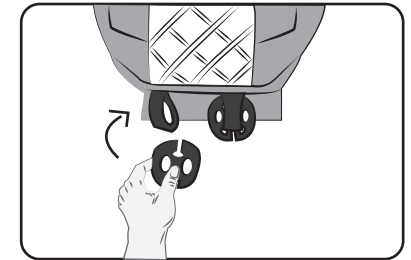


- 4 Locate the two butterfly discs in the bag. Attach the butterfly discs to the straps located at the bottom of the backrest.

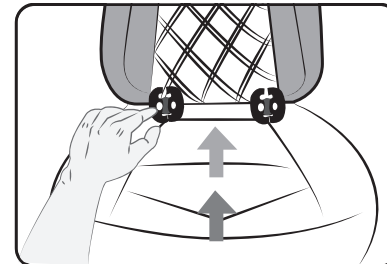


- 5 Push the butterfly discs through the seat crevice and position the discs upwards, against the back of the seat.

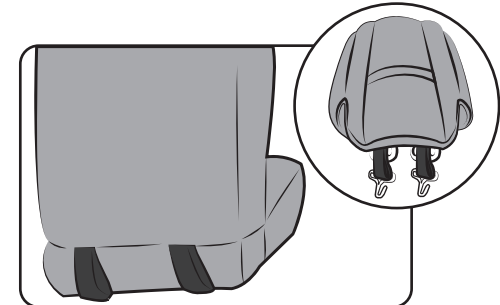

- 6 Remove the hooks from the bag and add them to the straps located on the backrest cover. Attached the hooks to the bottom portion of the seat, as shown above.

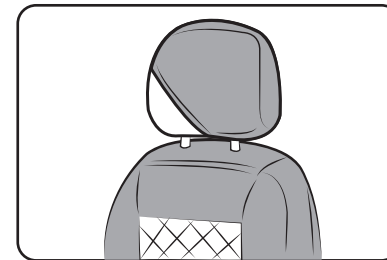

- 7 Slip on the headrest cover. TIP: Starting from either side of the headrest and sliding the cover sideways will help you achieve a secure fit.

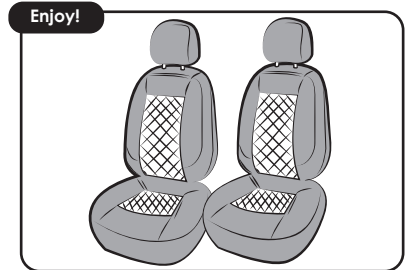

- 8 Adjust accordingly, smooth out your custom fit seat covers and enjoy!